

ESP9000/9100 Potentiometer Reading and Cam screw location

1, Needle # and Potentiometer Reading

Needle #	Reading	Needle #	Reading
#1	915	#9	507
#2	864	#10 (A)	456
#3	813	#11 (B)	404
#4	762	#12 (C)	353
#5	711	#13 (D)	302
#6	660	#14 (E)	251
#7	609	#15 (F)	200
#8	558		


Please confirm each needle # and Potentiometer Reading.

If some needle does not mach,

(1), Potentiometer break

(2), Some screws loose, please confirm all screws.

2, Needle #15, Potentiometer Reading must be 200.

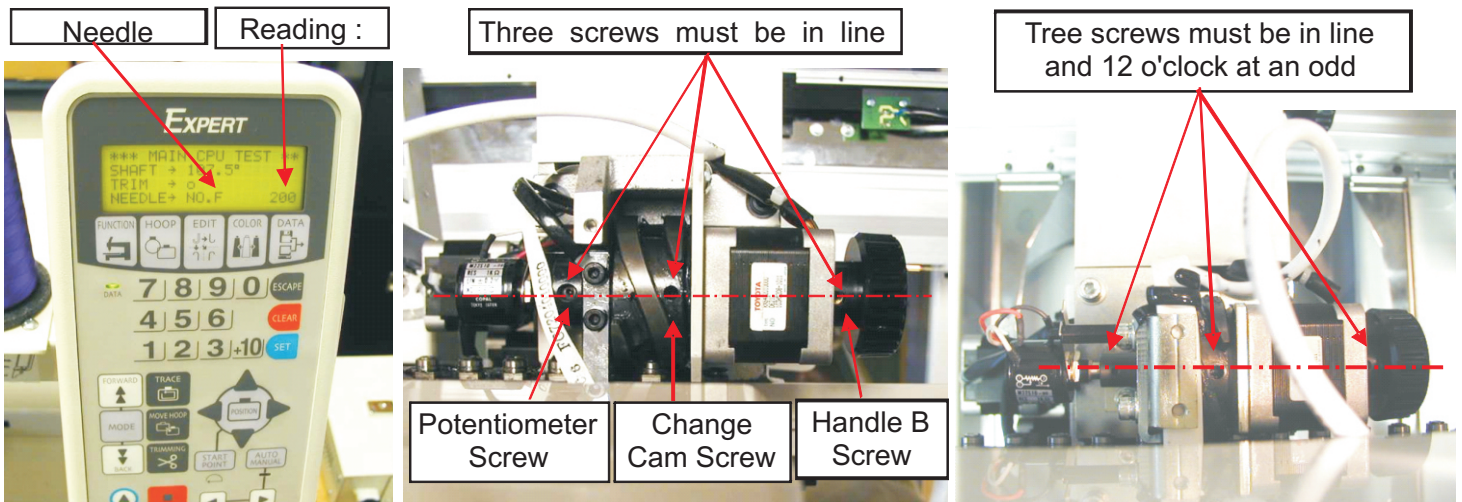

3, Needle # 1, Potentiometer Reading must be 916.

