


TRIMMING ERROR



ERROR: CAN NOT TRIM!

This error happened when the trimming blade sensor stays open and the machine can't detect it. (fig 1)

Fig 1

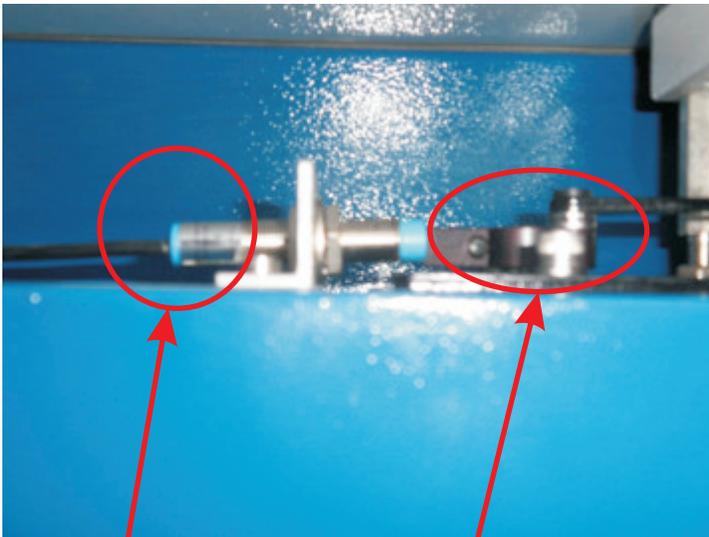

Behind the machine under table is located the trim sensor make sure the light in ON if that is not the case, move the arm in or out until the sensor light turns ON (fig 2)


Then reset the trimming on the machine by pressing trimming.


Fig 2

Sensor light OFF

Trimming blades arm

Sensor light ON

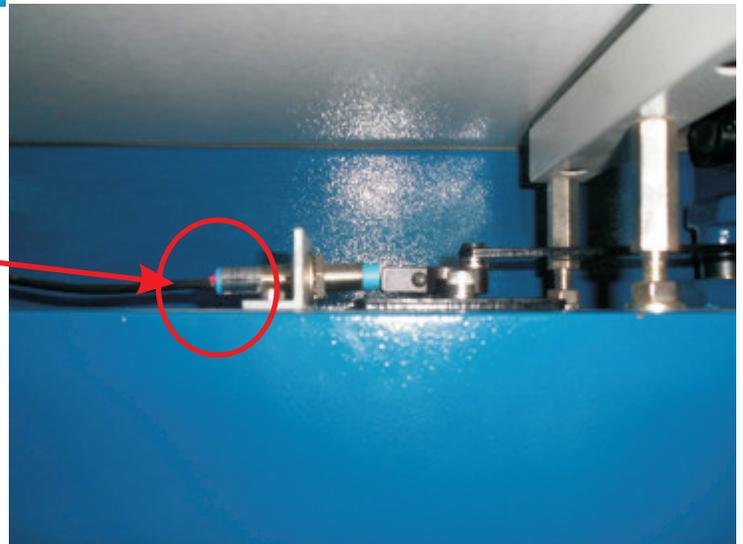

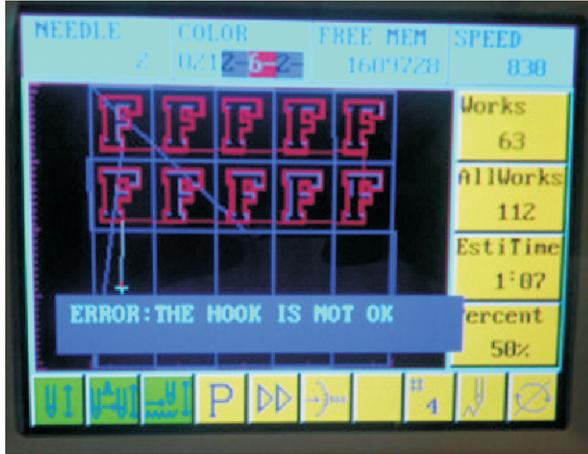

ERROR: THE HOOK IS NOT OK

This error happened when the trimming arm sensor for the hook stays open the machine can't detected.


Slide the cover off between head 3 and 4 where the emergency bottom is located as show on (fig 1)

Fig 1



Make sure that the sensor light is ON if that is not the case, move the Motor arm back or forward until the sensor light turns ON (fig 2)

Fig 2

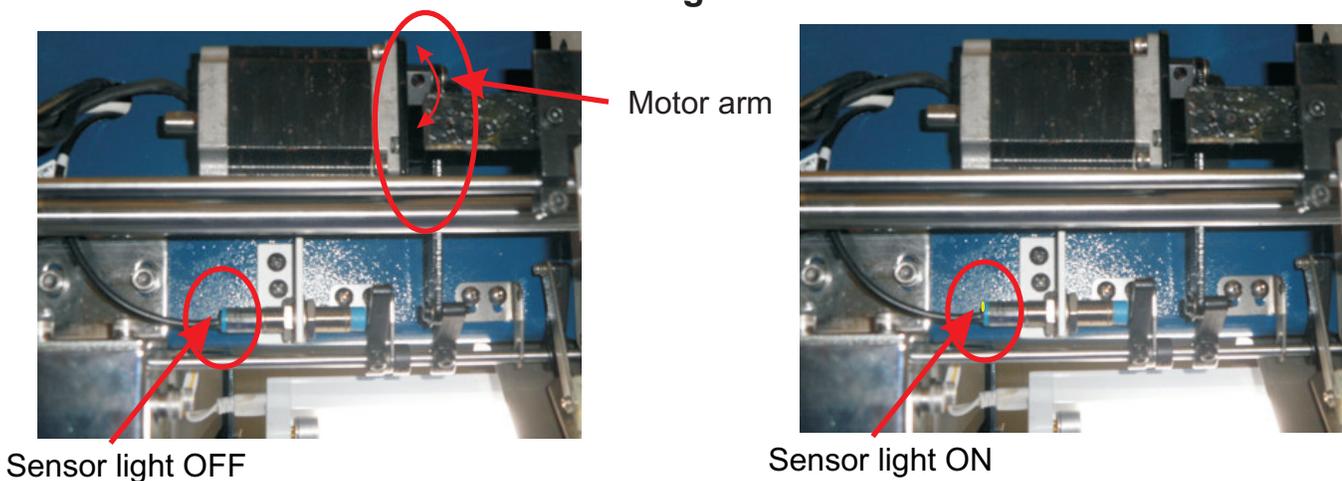

Sensor light OFF

Sensor light ON

Then reset the trimming error on the machine by pressing trimming again.