



Note

Do that before turns the machine ON
the machine will go thru all the movements

PART LOCATION AND INSTRUCTIONS TO RAISE THE THREADING TUBE RACK

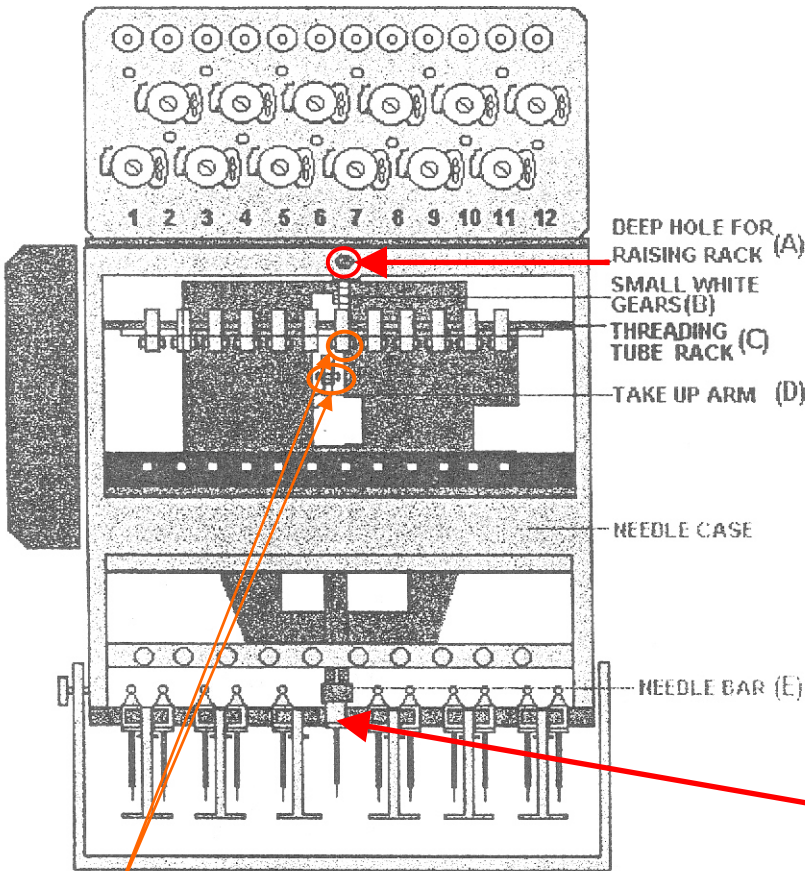

1
USE THE LONG BLACK
HANDLE SCREWDRIVER
THAT CAME WITH YOUR MACHINE


2
INSERT THE SCREWDRIVER
INTO THE HOLE (A) , USING VERY
LIGHT PRESSURE ROTATE
THE SCREWDRIVER
COUNTER CLOCKWISE, 

3
THE SMALL WHITE GEARS (B)
SHOULD BE ROTATING, AND
THE THREADING TUBE RACK (C)
IS RAISING VERY SLOWLY.

4
KEEP ROTATING THE SCREWDRIVER
UNTIL THE THREADING
TUBE RACK (C) RAISES UP HIGH
AND THEN TAKES A SMALL DROP.

Take the socket out of
the bar

Take the tube out the holder
and the arm as well

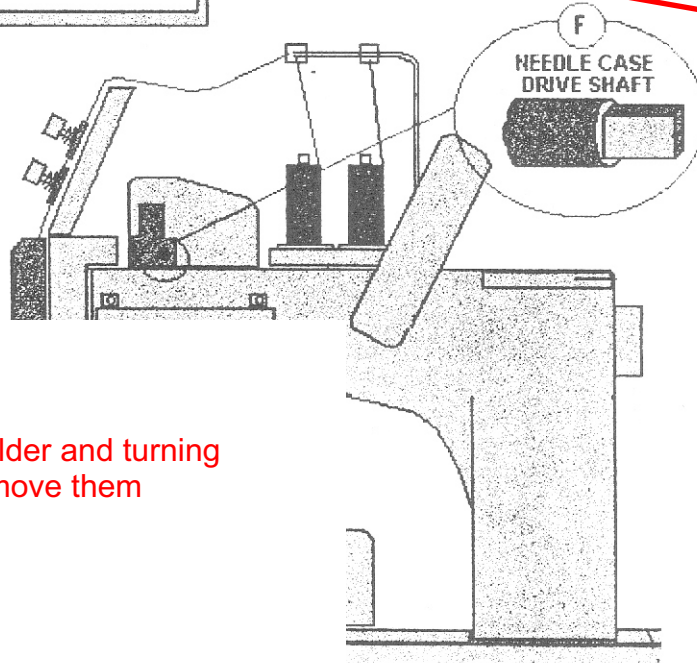

Caution: if by moving the holder and turning
the machine the rack won't move them
may be the motor is weak.

After the machine move and go to position make a color a manual
color change to get to that nedle and go to diferent position